

30 liter ReactorBuild Manual

Overview

This is the construction manual for the 30 liter size biodiesel reactor. The design concept of this system was to produce a small scale farm type biodiesel reactor which by nature of its design and construction affords the ability to get consistently reliable quality results when used in conjunction with proper procedures and good quality chemicals to convert bio-oil feed stocks of reasonable quality into methyl ester fuel suitable for use in diesel internal combustion engines and oil burner type heating equipment.

Scope

This document covers the detailed description of the process of building the reactor. The instructions in this document therefore give specific guidance on how to assemble the sub components of the reactor system from the materials available as called out in the BOM (Bill Of Materials) included as an excel spreadsheet.

A section on parts substitution is included to advise on the important considerations for these components is given so that an appropriate choice of alternative materials and components can be made to ensure the final outcome will be a unit with equal functionality and safety to the original design concept. Some treatment of the subject of scalability of this design is included with the same consideration to appropriately informed choice as to the selection of components as well. It should be understood that the information regarding scalability is offered as a general guideline and that several factors that come into play in the course of up-scaling reactor size may result in performance that needs to be optimized through repeated experimentation until the exact configuration and process is realized.

Final assembly of sub components follows the description and instructional sections for the sub components. Some guidelines as to consideration of the location and use of the equipment is included in the final section of this manual, however, instructions for the use of the reactor are beyond the scope of this document and are the subject of another course and associated documents.

Purpose

The purpose of this manual is to provide guidance and step by step instruction for the construction and assembly of the 30 liter size biodiesel reactor. No warranty as to its use is expressed or implied in this document and no liability for its use or any possible outcome of its use is assumed by the author, Non Profit Fuel, or any of its members. Every effort is made in the design of this system to address safety, reliability and consistency concerns. Product of high quality can be produced by this system but the responsibility for safe use, and verification of the product quality is the responsibility of the user. This manual may have errors and is subject to changes as the need arises so always obtain the most recent version at www.nonprofitfuel.ca. Obsolete versions are not supported although considerable support may be obtained from the biofuels community in any case with regard to the evolution and best setup of biodiesel reactors in general. This project should be regarded as a work in progress. The design is expected to evolve as needs arise and as new ideas and processes become available. This is part of the reason why a biofuel experimenter must accept full responsibility for making sure everything is done correctly and in accordance with established knowledge of the biofuel community at the time any experiment or routine process is undertaken. Everything written in this document should be regarded as for information purposes only and what you do with that information is your own responsibility.

Another important consideration from an environmental perspective is the fact that this reactor design calls for many parts in the BOM which are produced within the framework of a fundamentally flawed global economic model which is unsustainable. There is a questionable aspect to this project in this regard since many of the part sources originate in offshore production sites. Undoubtedly those who are resourceful can find local and therefore environmentally responsible alternatives to the parts selection in

building this reactor. One of the constraints for this project was to offer something that would be universally achievable with readily available parts. This led to unfortunate choices having to be made in specifying a source that would be available to people in a large area rather than just my local community. I fully encourage the builder to look for local alternative sources of parts for this project as long as no compromises to the performance of the reactor result. Those who value time and money most, will likely build a system closely matching the one described here, but those with more important objectives will no doubt take a more sustainable approach to the execution and maintenance of the project.

A central theme of this project is that it is open sourced. Therefore if you have been charged for any copy of this document then a fraud has been committed and please let me know so I can pursue it.. All of the information contained in this and supporting documents is offered under the Creative Commons public license and is therefore free to distribute under the terms of the license.

Tools Required

Hand tools:

- Carpet knife
- Adjustable crescent wrench or spanner set.
- Pipe wrench.
- Rat tail file
- Half round file.
- Flat machinist's file
- Hacksaw
- Screwdriver set.
- Ratchet set.
- Tap and die set
- Hammer and center punch
- Bench vise
- Propane torch and pipe solder kit
- Wire cutter
- Wire stripper
- Multimeter
- Hole punch set

Power tools:

- Hand drill and the following bits;
- 50 mm (2") hole saw
- Stepped bit or combination bits up to ¾" (20mm)
- Wire feed welder and or TIG welder. Gloves and helmet.
- Chop saw
- Angle grinder.
- Bench grinder.

Work Practices

Since this reactor is a vacuum system one item of great importance is the treatment of sealing surfaces. All connections on the reactor tank and vacuum plumbing must be very well sealed to ensure

proper vacuum operation, therefore always heed the following precautions when working with pipe thread connections.

- A. Avoid nicked or damaged threads on any component.
- B. Use proper application of Teflon tape and pipe dope appropriate to the materials without exception.
- C. Do not over torque compression fittings.
- D. Avoid scratching the outer surface of the 3/8" and 1/2" tubing which will ruin the seal at the recirculation line attachment points for vacuum service.
- E. Once components are installed such as the recirculation pump, or the coaxial drier. Use caution to avoid applying forces to these components which would over stress the connections and perhaps damage vacuum integrity of the system.
- F. Use proper soldering techniques for soldered connections.

When working with tools, always use appropriate safety equipment and measures to avoid injury such as safety glasses, gloves, safety shoes, and proper attitude which means if you are not sure about what you are doing, do not proceed. Ask for clarification and make sure you have a clear understanding of what you have to do and what is required before proceeding.

Safety

Personal safety gear: Safety glasses, safety boots or shoes, work gloves.

Additional safety considerations: Always use proper techniques when working with power tools, lifting anything heavy, working with chemicals, electrical connections, or welding equipment.

Parts list

Parts list is generated in an excel spreadsheet as a bill of materials (BOM) This sheet is printed and included at the back of this manual.

Parts substitution

If you are attempting to build the system by substituting components in the BOM with locally obtainable alternatives, you may be able to save some money. Substituting parts can be fine as long as the system design constraints are not violated. The system must be able to achieve an ultimate vacuum of 28" Hg or better. The recirculation pump rate should not be degraded from that achievable with the materials and parts called out on the BOM. A higher pumping rate is not a problem but a lower recirculation rate should not be accepted. Therefore no reduction in pump capacity or plumbing size can be tolerated. Some latitude is available in the choice of vacuum pump as long as ultimate vacuum is met. Various arrangements can be made for mixing methoxide in terms of mixing motor, shaft and agitator, and some ancillary components such as the temperature gauge, vacuum gauge, and exhaust shroud type and size have considerable flexibility. The reactor vessel size, heating element voltage and power, should not be changed.

Main sections of this manual

1. Liquid trap.
2. Coaxial gas drier.
3. Methoxide mixer.
4. Injector assembly.

5. Support frame.
6. Reactor vessel.
7. System assembly.
8. Exhaust stack.
9. Electrical hookup.
10. Copyleft

1. Liquid trap

1. Trap vessel: A one gallon cider jug was chosen as a liquid vessel for this application because it is an appropriate size for a reactor in the 30 to 100 liter range. The cider jug is able to withstand the pressure created by the vacuum used in this system so long as it is in perfect shape with no chips, cracks or scratches anywhere on its surface. A bottle with any chips or scratches will likely implode under vacuum and **MUST NOT BE USED**. The purpose of the trap is to collect and prevent any liquid removed from the air pumped out of the reactor from reaching the vacuum pump and provides a convenient way of collecting this liquid.
2. Containment vessel: The trap vessel is housed in a containment vessel which serves three important purposes. The first purpose relates to safety and it is to prevent flying glass from being a hazard if the trap vessel was ever to implode. The second and related reason for the containment is that in the case that an implosion occurred when the trap contained methanol the exhausted containment vessel prevents methanol from escaping into the work area and contains the resulting methanol vapors to the area which is actively exhausted to the outdoors. This is an important safety feature of the design and must not be omitted. The final purpose relates to protection of the vacuum pump. The liquid removed from the air by the coaxial drier comes out at cold temperature and thus has a low vapor pressure. It is important to use insulation around the liquid trap to maintain this cold temperature so that liquid does not warm up and add to the vapour load on the vacuum pump. The containment vessel conveniently serves this purpose when fitted with insulating material as outlined below. The containment vessel is fabricated from a commonly available 5 gallon pail with simple modification to the lid as follows:
 - A) Using a 50mm (2") hole saw cut a hole in the center of the pail lid for the connection to the mouth of the trap vessel. This is where the rubber bung on the end of the coaxial drier will connect to the mouth of the trap vessel.
 - B) A second 50mm (2") hole will need to be cut for the exhaust port for the containment vessel. The exact position of this hole is not critical except that it must line up with the exhaust connection at the time of final assembly. The exhaust hole will be cut at that time to mate with the location of the lower exhaust stack.
 - C) Using a carpet knife place a series of equally spaced cuts around the rim of the pail lid approximately 50 mm (2") apart to ease removal and installation of the pail lid during use. **Photo #1** shows these details.



Photo #1. Top of Liquid trap containment vessel.

- D) The pail is insulated with a roll of aluminized bubble wrap type insulation. Due to variations in dimensions of pails and cider jugs, rather than list dimensions here it makes more sense to give instructions as to the desired result needed and you can measure the dimensions of the materials you have on hand and cut them appropriately. Install the pail lid, and with a measuring tape, note the depth from the lid to the bottom of the pail. Cut the roll of insulation to this width and place the material into the pail so that it forms an insulating jacket roughly 50 mm (2") thick around the inside surface of the pail. The cider jug needs to sit so that the mouth of the jug is just at the height of the pail lid when the lid is installed, so measure the height of the bottle and subtract it from the depth of the pail you noted previously. This figure is the height of the spacer you need to install in the bottom of the pail to support the trap vessel. The spacer should offer insulation and be made of non absorbent type material. Depending on the dimensions you have to work with, you may be able to use the remaining strip of aluminized bubble wrap cut from the width of the roll when making the jacket as the spacer by trimming it to the correct dimension and rolling it up to form the spacer at the bottom of the pail. A galvanized duct cap for a 200 mm (8") round duct serves nicely as a support to rest on the insulated spacer for the cider jug to sit on. It distributes the weight of the bottle and also serves to keep the insulation jacket spread open against the sides of the pail. Use anything you have on hand which is suitable for this purpose. See **Photo #2** for details.



Photo #2. Insulated trap vessel.

2. Coaxial gas drier

The coaxial gas drier is fabricated from two lengths of copper water pipe, two reducing tee fittings and a $\frac{1}{2}$ " solder x $\frac{1}{2}$ " male pipe thread adapter. The drier gets its name from the fact that the length of $\frac{1}{2}$ " copper pipe runs coaxially through the center of the outer $\frac{3}{4}$ " copper pipe which forms the water cooling jacket around it. At either end of this jacket a reducing tee is fitted in order to accomplish this but the reducing tees must be slightly modified to allow this as follows.

- A) The reducing tee which has a $\frac{3}{4}$ " port on one connection and a $\frac{1}{2}$ " port on each of the remaining sides has a slight internal swelling or shoulder on the inside diameter which is intended to prevent over insertion of the pipe into the fitting. On the $\frac{1}{2}$ " port opposite the $\frac{3}{4}$ " port we need to remove this shoulder so that the $\frac{1}{2}$ " pipe can slide all the way through the fitting to run inside the $\frac{3}{4}$ " pipe. This is done with a rattail file as shown in **photo# 3**.



Photo #3. Removing the end stop shoulder.

Work carefully and remove only enough material to allow the fitting to slide down the $\frac{1}{2}$ " pipe. Removing too much will only weaken the fitting and possibly result in a leak. Modify both of the tee fittings in this way.

- B) Using a pipe cutter cut a 61 cm (24") length of $\frac{3}{4}$ " pipe and a 81 cm (32") length of $\frac{1}{2}$ " pipe as well as two 50 mm (2") lengths of $\frac{1}{2}$ " pipe.
- C) Before soldering it is important that the surface of the copper be clean and free of oxide. Use sandpaper to ensure a bright exposed copper surface to the inside of the fittings and outside surface of the pipe at the area to be soldered. Take care from this point to avoid letting any grease or dirt including from fingerprints from contaminating these surfaces as you work. The tee fittings on the $\frac{3}{4}$ " jacket serve to seal against water but the pipe thread adapter solder joint and the lower tee are vacuum connections which have to be extremely leak tight, so save those connections for last if you are inexperienced in this type of soldering. Position the $\frac{1}{2}$ " pipe inside the $\frac{3}{4}$ " pipe. Apply a fine film of flux paste to the ends of the $\frac{3}{4}$ " pipe and fully insert it into the tee fittings at either end. Adjust the position of the $\frac{1}{2}$ " pipe to allow you to get some flux paste into the area where the solder connection will be by alternately sliding the pipe up a bit and applying the paste before sliding back the other way to bring the paste into the joint area. You want to leave about 50mm (2") protruding from the tee on the one end where the thread adapter goes and have both of the tees aligned in the same direction. **Photo# 4** shows the top end of the coaxial drier partly assembled.



Photo #4. Top end of coaxial drier showing water jacket connection in exploded view.

- D) In order to make a good solder joint both pieces of metal to be joined have to be clean and hot enough to melt the solder. Support the assembly so as to maintain alignment and allow freedom to work around the fittings with a propane torch without getting the flame near anything flammable. Apply the flame to one side of the fitting so that it is heating both the fitting and the pipe. Allow time for the assemble to heat. Depending on the ambient temperature this may take half a minute or more. DO NOT put the solder into the flame. Apply the solder at the junction of the pipe and fitting on the opposite side to where the flame is applied and when the metal is hot enough the solder will flow. You should see the solder run completely around the joint at this point and that is sufficient. More solder than this just makes a mess and does not make a better joint. Take care to avoid dripping hot solder on yourself or anyone assisting. Do the 1/2" connection first and then the second 1/2" and you will find that the latent heat from the first connection makes the second one go much faster. Do the 3/4" connection last. Do not disturb the position of anything while it is hot. Wait for the connection to cool until the solder solidifies before moving anything. Repeat for the tee at the opposite end.
- E) Clean and apply flux to the two short sections of 1/2" pipe and insert them into the remaining 1/2" ports on the tee fittings. Install two boiler drain valves to the ends of these sections and remove the valve stems by loosening the nut beneath the valve handle before soldering in place.
- F) The vacuum port is fabricated out of another reducing tee and a short section of 3/4" tubing. Use the same techniques outlined above. The branch of the tee is

connected to the vacuum valve with a short section of $\frac{1}{2}$ " tubing terminated in a sweat to $\frac{1}{4}$ " FPT transition. **See Photo #5.**



Photo #5. Detail of lower end of coaxial drier.

- G) Carefully clean and flux the top end of the $\frac{1}{2}$ " coaxial pipe and the $\frac{3}{4}$ " pipe thread adapter fitting and prepare to solder it on the end of the pipe. Arrange the assembly vertically with this connection at the bottom and support the fitting so that it won't fall off the end of the pipe during the soldering process. Be sure to use plenty of heat and make sure you see the solder run quickly around the entire circumference of the joint before removing the heat. Let the completed assembly cool in place without disturbance. Protect the adapter threads and set the drier aside for later.
- H) A number 6 rubber stopper is used as a bung for the liquid trap. A $\frac{3}{4}$ " hole needs to be made in the stopper, for the end of the coaxial drier. If you do not have a $\frac{3}{4}$ " hole punch then cut the hole by sharpening the end of a short section of $\frac{3}{4}$ " copper pipe and using it as a hole cutter. Position the sharpened tube end at the desired location on the small end of the stopper and lubricate it with some soap or glycerin and then use a vise to force the cutter through the stopper.
- I) Insert the $\frac{3}{4}$ " vacuum tube through the stopper from the larger diameter end. Use soap or glycerin as a lubricant to ease this process.

3. Methoxide Mixer

The methoxide mixer assembly is made from a stainless steel stock pot and surrounded by a plastic shroud made from a 5 gallon pail. The shroud is connected to the exhaust so that no vapours from within can escape into the room during the mixing process even when the trap door is opened. You may have to look around until you find a combination of pail and pot that fit together. Basically all you need is to be able to put the stock pot into the bucket so that it sits at the bottom and use a bucket that is deep enough to allow room for a funnel to be placed through a hole in the pot lid and still be able to put the lid on the bucket.

Exhaust shroud.

- A. A second 5 gallon pail is used similar to the liquid trap exhaust shroud. This lid will have a trap door which can be opened and closed for adding chemicals. Fashion the door by cutting a wedge shape from the edge toward the center. The width of the wedge should be about 6" (150mm) at the outer rim of the lid. Tin snips work well for this. Use a small hinge to secure the trap door near the center of the bucket lid. See **Photo #6**



Photo #6 Methoxide mixer lid.

- B. Cut the lid with slits around the perimeter in a similar fashion as was done for the liquid trap.
- C. Roughly 3" (75mm) from the side of the lid opposite the trap door drill a xxx" (xxmm) hole for the mixer motor mount, insert the mount as shown in the photo and set the lid aside.
- D. On the bottom of the pail drill a ¾" (20mm) hole at the center.

Modification of stainless stock pot.

- A. The bottom of the pot needs to be deformed to a convex shape so that all the Methoxide drains to the fitting which will be welded to the center bottom of the pot. This can be done with a press or by supporting the pot around its edge and using weights to deform the bottom outwards.
- B. Drill a 1/4" (6mm) hole in the center of the pot at the point of maximum depression.
- C. Using a hacksaw squarely cut the threaded portion of the stainless methoxide fitting off and deburr the hole. Be careful not to damage the flared end of the fitting.
- D. Use a TIG welder to weld the fitting to the bottom of the pot at the hole location. Put the ferrules for the fitting aside in a safe place and put the compression nut on the fitting to protect it. If the sealing surfaces are damaged after this point it will be a real problem so keep them protected until it is time to install the methoxide delivery line.



Photo #7 Stock pot detail

- E. Place the stock pot into the pail so the methoxide fitting protrudes from the hole in the bottom of the pail. You may need to bend or remove handles if any on the sides of the pot to make it fit in the bucket. My pot had the handles riveted on with aluminum rivets. I drilled these out and used plastic 1/4-20 bolts to fill the holes. I cut the length of the bolts so that they just extend to the sides of the bucket and hold the pot from moving around inside the bucket. The methoxide level doesn't go as high as those holes but I didn't want to leave them open.
- F. Place the lid on the pot.
- G. Place the lid on the pail and open the trap door.
- H. The mixer shaft needs a hole drilled in the end and tapped with 6-32 threads. Check the shaft for straightness by rolling on a flat surface.

- I. Loosen the locking ring on the methoxide mixer motor and temporarily place the methoxide mixer motor into the motor mount as it appears in the photo. Temporarily screw in a small piece of 6-32 threaded stock or a 6-32 machine screw with the head removed into the end of the mixer shaft. Slide the stainless mixer shaft through the motor till the threaded insert contacts the lid of the stock pot. Mark this location accurately on the lid of the pot. If you grind the threaded piece to a point you will be able to mark the spot by just raising the shaft a little and letting it fall.
- J. Take your funnel and lower it through the trap door till it rests on the lid of the stock pot. Mark the location on the lid of the stock pot where the center of the bottom of the funnel rests.
- K. Remove the lid of the stock pot and drill a 7/16" (11mm) hole for the mixer shaft.
- L. Remove the ferrule and o ring from the fitting to be used as the mixer shaft bushing and drill out the internal hole with a 0.264 (6.7 mm) Letter H drill bit.
- M. Thread the fitting into the hole in the pot lid.
- N. Using a hole saw, drill an appropriate sized hole so that your funnel sits on the lid of the stock pot with the end of the funnel protruding through this hole.
- O. Finally measure the distance from the lid of the stock pot to the top of the bucket and mark a spot on the bucket 2" (50mm) above this point for the exhaust port.
- P. Using a 2" (50mm) hole saw, cut a hole through the side of the bucket at the point you just marked.

4. Injector assembly

The pump is mounted on a manifold connected to the reactor tank and the pump inlet. This manifold contains a home made type of injector that creates a suction effect at the pump inlet which helps with chemical injection into the oil stream, and also allows water to be pulled in during the wash cycle. The injector is fabricated from a tee, pipe nipple and hose barb as follows.

- A. Carefully drill a hole and tap a 1/8" FPT opposite the branch of the tee for the methoxide injection port.
- B. To make the injector more efficient it should have a smooth surface so use sandpaper to remove the hose barbs from the outer surface of the fitting.
- C. Using a 1/2" NPT pipe tap cut threads on the INSIDE of a 3/4" x 2-1/2" black iron pipe nipple.
- D. Tape and thread the hose barb into the end of the pipe nipple.
- E. Prepare the same end of the pipe nipple outer threads and screw it into the end of the plastic 3/4" tee so that the hose barb now extends into the tee. The end of the hose barb should be visible by the threaded end on the opposite side of the tee. See **Photo #8**.



Photo #8 View of injector choke tube as seen from elbow end.

- F. Prepare the male threads of the plastic $\frac{3}{4}$ " street elbow and screw it in to the end of the tee.
- G. Prepare and install the $\frac{3}{4}$ " x $\frac{1}{2}$ " reducing bushing as well as the $\frac{1}{2}$ " MPT x $\frac{3}{8}$ " compression fitting on the branch of the tee for the wash port.
- H. The stainless methoxide injection valve is fitted with a $\frac{1}{8}$ " FPT x $\frac{1}{4}$ " compression fitting and is attached to the inlet manifold at the methoxide injection port via a $\frac{1}{8}$ " PVC short pipe nipple. Prepare threads properly and do not over tighten these connections. **Photo #9** shows the manifold positioned as a kind of exploded view with the major components arranged as they would go together.

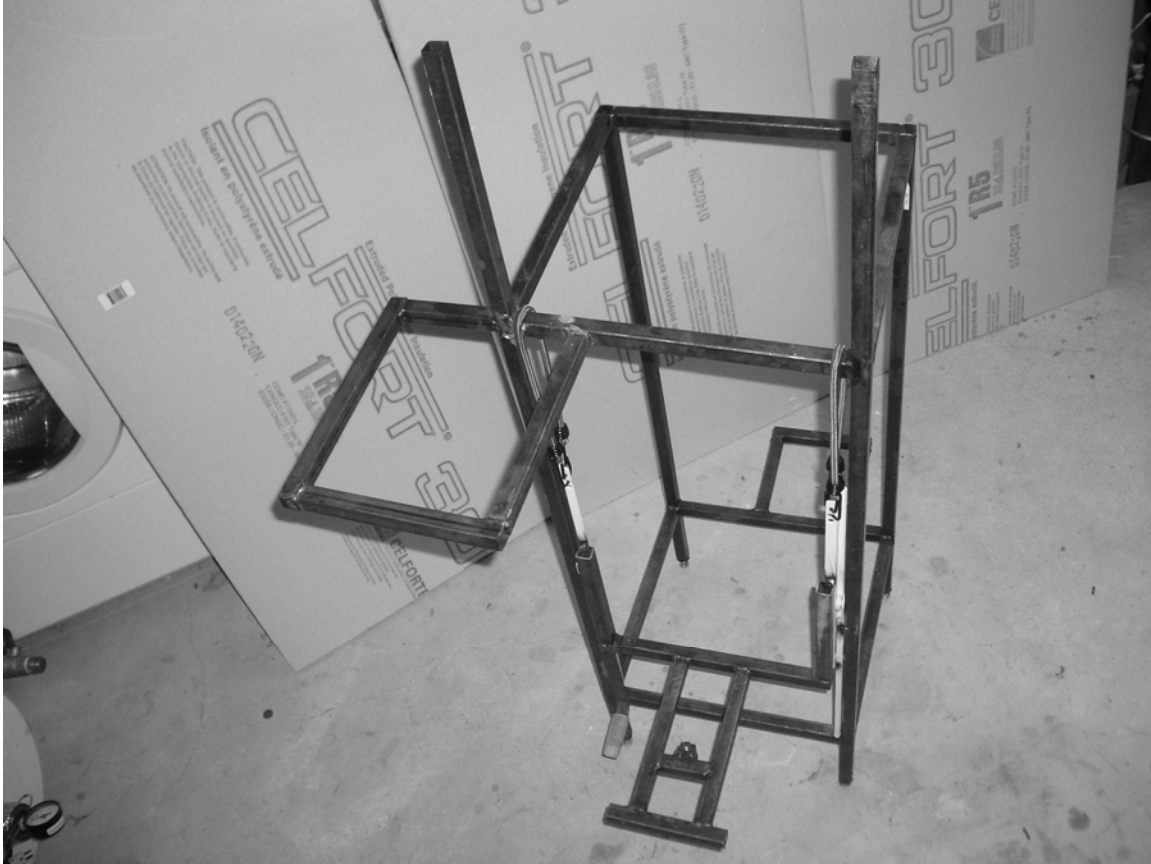


Photo #9 Exploded view of inlet manifold.

5. Support Frame

The frame is constructed from 19mm (3/4") square tubular structural steel tubing using welded construction. A small wire feed welder suitable for material up to 3mm (1/8") thickness will suffice for this job. The tubing must be cut accurately using a hacksaw or chop saw if available. A chop saw is preferred since the square cut it provides greatly eases the ability to maintain squareness during the welding of the assembly. An angle grinder is handy at times for grinding down welds and rounding corners quickly but a hand file could be used to accomplish this where necessary as well. Be sure to avoid fire hazards while welding and grinding work is taking place.

- A) Start by cutting the 1/2" tubing to various lengths as shown in the bill of materials.
- B) The frame as shown in **photo #10** has a left and right side. Start by fabricating the left side which has the lower bracket for the vacuum pump and then the right side which is taller and has the sliding bracket for the liquid trap. Once the two frame halves are constructed they will be joined together by upper and lower joiner tubes in the front and back. After the two frame halves are joined, the remaining sections will be added to the frame with it standing in place. These sections consist of the methoxide mixer support and the liquid trap bracket.



Photo#10 Completed frame.

- C) Left hand side (LHS) construction begins by clamping the longer front and rear tubes in position with a joiner tube between them flush with one end and a second joiner tube positioned a distance of 125 mm (4") from the opposite ends of the tubes. Clamp everything square and tack weld the joiners in position. Welder's corner magnets are very handy for this part. Check squareness again before completely welding the joiners in place.
- D) Similarly the right side (RHS) frame members are clamped and welded, but in this case the joiners are positioned 300 mm (12") away from one end and 125 mm (5") from the opposite end. To avoid later problems compare the length of the upper and lower joiner tubes and make sure they are exactly the same length. **Failure to do this** will result in problems with the sliders on the liquid trap support bracket later on.
- E) Lay two joiner tubes on a flat work surface suitable for welding such as metal or concrete and position the LHS and RHS frame sides so that the upper and lower joiner tubes on each side match up with the two joiner tubes laying on the work surface. The frame is laying on it's back in this orientation. Using bar clamps, clamp the frame sides in position and maintain square alignment. Similarly clamp the front upper and lower joiner tubes in place maintaining alignment with the upper and lower joiner tubes on the LHS and RHS. Check squareness in at all corners and adjust if necessary to get best alignment. Tack all joiners and check alignment again before completing the joiner tube welds.
- F) Position a tee nut with the threaded part inside the end of each side tube at the bottom end and tack weld in position as shown in **Photo #11**.



Photo #11 Lower frame detail.

- G) Thread a ¼" nut onto each of four ¼" stove bolts and thread these into the tee nuts. These are the leveling feet for the frame.
- H) Stand the frame on its feet and adjust the levelers so that the frame rests solidly without teetering on it's legs.
- I) Measure the bottom plate for the vacuum pump and cut pump bracket front, rear and side members to fit the pump used. Weld these on to the lower joiner tube on the LHS frame side.
- J) Remove paint from the ends of the drawer slides opposite where the roller is and a section on each side 50mm (2") from the roller end so that the drawer slides can be tack welded in position on the inside surfaces of the RHS frame sides as in Photo #8
- K) Cut the front, rear and bottom piece of the liquid trap bracket and position them as shown in photo #9
- L) Cut the front, rear and side pieces of the pail support for the liquid trap bracket and position them as shown in photo #10 centered along the lower slider joiner tube to form the pail support and weld squarely in place. Alignment is not critical.
- M) Insert the matching halves of the drawer slides and measure the exact distance between the sliders. Insert thin cardstock between the rollers and guides to allow free movement after welding and temporarily tape slides in position. Measure distance between slides top and bottom. If the distance is not the same you will experience difficulty which will be difficult to correct. Tack the bucket support bracket tubes to the sliders with the smallest tack possible and check for free operation. Adjust as necessary before welding permanently.
- N) Cut a 225mm (9") length of 12mm x 3mm (½" x 1/8") flat bar stock and bend it 90 degrees 50mm (2") from the end to form a foot pedal and weld it to the front end of the liquid trap bracket as in **photo #10 and #11**.

- O) Weld methoxide support left side piece on to front of frame as an extension of the RHS joiner tube.
- P) Tack methoxide support front piece to the end of the piece attached in previous step.
- Q) Tack methoxide support right piece to the end of the latest piece.
- R) Finally add the rear piece for the methoxide support. Check for squareness and weld up remaining joints. Check **photo #10** for details.

6. Reactor vessel

Removal of Anode rod.

- A. Remove the top cover of the hot water tank and insulation.
- B. Using a pipe wrench unscrew the anode rod which is located on top of the tank close to one side.
- C. Measure the location of the center of the hole with reference to the metal jacket surrounding the insulation layer of the tank and with reference to the screw hole location for the nearest screw which holds the lid you have removed.
- D. Now mark the location on the removed lid and use the 2" (50mm) hole saw to create a hole in the lid which matches the location of the anode rod fitting on the top of the tank. This hole is for the connection to the coaxial gas drier which will be installed later.
- E. Cut a matching hole in the insulation and replace the insulation and lid.

Removal of pressure relief.

- A. Using a pipe wrench remove the pressure relief valve on the side of the tank near the top. You may need someone to hold the tank as this fitting may be quite tight.

Removal of hot and cold water ports.

- A. Using a pipe wrench remove the pipe nipples at these ports.
- B. One of these nipples will be reused at the inlet port so take care to protect the threads.

Drain hole preparation.

- A. Turn the water heater upside down and look at the drain fitting on the bottom surface. Remove the drain plug. If the drain hole fitting does not have a plug in it, and the hole is not open you will have to drill the hole out. The threads must not be damaged while doing this. If you can arrange to do this while drilling in an upward direction it will prevent metal bits from falling into the tank which will have to be removed otherwise. Mark the center with a center punch and drill a 1/4" (6mm) pilot hole and then successively larger holes up to about 5/8" (16mm). This is easily done using a stepped drill bit.
- B. Ensure that the tank is clean and free of metal fragments. Remove the heater element and use a magnet if necessary to accomplish this. Turn the tank right side up and mount it on the stand and secure it with a strap against the side of the frame extension legs on the right hand side. So that the heater element access hatch is adjacent to the frame RHS so that it is free to be removed
- C. Using the technique described in the work practices section prepare the ends of a 3/4" x 6" pipe nipple and thread it into the drain hole and tighten with a pipe wrench.
- D. Install a 3/4" x 1/2" reducing tee on the end of the pipe nipple and tighten it but make sure to leave off with the tee branch facing toward the front of the frame.
- E. Prepare and install a 3/4" close nipple into the end of the tee.

- F. Install a 3/4" ball valve on the close nipple and tighten till the handle is facing the front using two wrenches so that the orientation of the tee is not changed.
- G. Prepare and install a garden hose adapter in the end of the ball valve.
- H. Prepare and install a 1/2" x 45 degree street elbow on the branch of the tee tightening until the elbow points upward.
- I. Prepare and install a 1/2" close nipple on the elbow and thread a 1/2" ball valve onto the nipple. Tighten till the valve handle is accessible from the front of the frame and ensure the elbow orientation is not changed.
- J. Prepare and install a 3/8" x 1/2" thermoplastic push in fitting into the end of the 1/2" valve and do not over tighten the plastic fitting.

Installation of fill port.

- A. Prepare and install a 3/4" x 3" pipe nipple at the port where the pressure relief was removed. One of the hot and cold nipples removed from the tank earlier can be reused for this purpose. Install a 90 degree x 3/4" street elbow on the nipple pointing upward and prepare the other end and install a 3/4" ball valve. Tighten and check clearance of the motion of the valve handle.
- B. Prepare and install a 3/4" garden hose adapter to the end of the fill valve.

Level Interlock

- A. A port must be added above the level of the heating element for the interlock switch. This is done by cutting a 1/2"NPT black iron pipe union in half and welding it to the tank inside the heater access cover.
- B. With a hacksaw, cut the pipe union in half. Using a half round file carefully contour the cut face of the fitting so that it matches the curve of the tank wall. A good fit is important for welding.
- C. Center punch a mark near the top of the opening on the tank heater access area so that it is equidistant from both sides and top of the opening. This will leave room for the weld nozzle to weld the fitting. Remove scale from the surrounding area with sandpaper to prepare the surface for welding. Using a stepped drill bit drill a 3/4" hole at this location and use a magnetic wand to remove drill tailings from inside the tank.
- D. Remove scale from the fitting in the area to be welded. **NOTE: welding must only be done on a tank which has never been filled with any flammable substance otherwise an explosion may occur.** Check welder settings to ensure proper weld performance since this is a vacuum seal area and is therefore a critical weld. Carefully weld the fitting onto the tank. See **photo #12** for details.

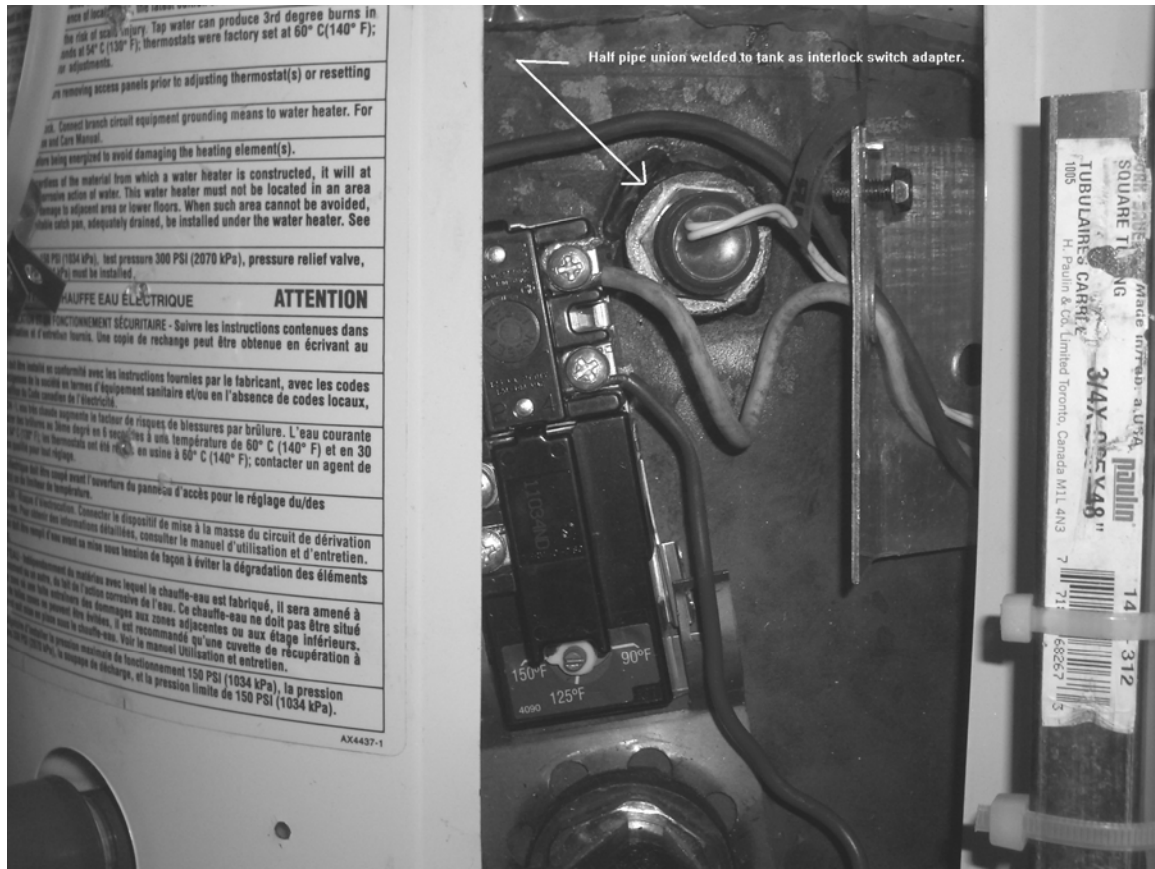


Photo #12 Detail of heater interlock installation.

7. System assembly.

Level interlock.

- A. Prepare threads and screw the level switch into the adapter port using care not to overtighten and stop with the N.O. marking up. Ensure that the switch contacts are open when the float level hangs down and close when it rises.

Coaxial drier.

- A. Prepare and thread the second of pipe nipples removed from the water connections to the port on top of the tank where the anode rod was removed.
- B. Install a 3/4" tee on the end of this nipple and tighten till the branch of the tee points to the RHS.
- C. Install the 3/4" x 1/4" bushing on the top of the tee and install the vacuum gauge into this bushing.
- D. Prepare and install a 300 mm (6") long 3/4" nipple into the branch of the tee and install a 90 degree elbow on the end tightening until it points downward.
- E. Prepare the pipe adapter on the end of the coaxial drier and install the unit into the elbow in the previous step, tightening until the boiler valves point to the RHS.

Recirculation system.

- A. Using a 1/2" pipe thread cut internal threads on the 2.5" x 3/4" black iron pipe nipple.
- B. Using fine sandpaper remove the hose barbs from the plastic injector piece. Tape and thread the injector into the threads created in the pipe nipple in the last step.

- C. Prepare both ends of the iron nipple and thread the end with the injector into the plastic $\frac{3}{4}$ " pipe tee so that when holding the tee with the branch facing down the nipple extends to the right.
- D. Prepare and thread the $\frac{3}{4}$ " plastic street elbow into the opposite end of the tee, and tighten with it ending pointing to the opposite side as the branch. Prepare and thread both the plastic $\frac{3}{4}$ " x $\frac{1}{2}$ " bushing and the $\frac{1}{2}$ " x $\frac{3}{8}$ " plastic quick connect fitting to the branch of the tee.
- E. Prepare the threads of the $\frac{1}{8}$ " MPT x $\frac{1}{4}$ quick connect fitting and install in the female port of the methoxide control valve.
- F. With the inlet manifold oriented with the branch facing down and the street elbow on the left, drill and tap a $\frac{1}{8}$ " FPT on the side of the inlet manifold tee facing you to accept the methoxide control valve. Prepare the $\frac{1}{8}$ " MPT on the opposite port of the valve and thread the valve into the hole on the manifold tee. The recirculation inlet manifold assembly is now complete and ready for installation.
- G. Prepare and thread the recirculation manifold into the lower 'cold' water connection on the side of the tank. This connection should not be over tightened. Since it has plastic components it should be turned until finger tight and then any remaining rotation to ensure that the elbow on the end of the manifold points straight up.
- H. Prepare the threads on the pump inlet and turn the pump onto the elbow finishing with the pump outlet pointing toward the front and orthogonal to the inlet manifold.
- I. Install the plastic $\frac{1}{4}$ " FPT x $\frac{1}{2}$ " MPT bushing on the pump outlet hand tight and then install the $\frac{1}{2}$ " compression fitting on the bushing. Hand tighten the fitting and finish with 1 full turn with a wrench.
- J. Install the remaining compression fitting in a $\frac{3}{4}$ " x $\frac{1}{2}$ " bushing and thread it into the remaining 'hot' water port on the side of the tank.
- K. Insert the end of the $\frac{1}{2}$ " FEP tubing in the upper compression fitting.
- L. Using a heat gun, heat the tubing over about a 200 mm (8") section starting about 50 mm (2") from the end just installed.
- M. Bend the tubing downward maintaining a bend radius of no less than 50 mm (2") avoiding kinking the tubing. Be patient. The tubing will bend easily when warmed and do not overheat it.
- N. Similarly bend the lower end to align with the lower compression fitting on the recirculation pump outlet. With the help of a partner, place a block of wood under the tubing and trim the excess so that the tubing can be fully inserted into the fitting. Make sure it is completely bottomed out.
- O. Similarly cut and install the $\frac{3}{8}$ " FEP tubing from the bottom of the recirculation manifold to the compression wash fitting on the drain plumbing below the reactor. A gentle bend in the tubing is required.
- P. With all valves closed the reactor should now be vacuum tight. In order to test this, the liquid trap needs to be installed and in order to do that, the exhaust stack must be fitted.
- Q. Once the system can be pumped down, check to see that a vacuum of 28" Hg can be achieved. Seal any leaks if this is not the case.

8. Exhaust stack.

The exhaust stack consists of three connections for the liquid trap, vacuum pump and methoxide mixer. The main stack length is 75mm (3") ABS pipe. A 75mm (3") to 38mm (1-1/2") 45 degree tee and a 75mm (3") to 38mm (1-1/2") reducer serve to adapt to the 38mm (1-1/2") exhaust lines which connect to the liquid trap and the methoxide mixer. The branch which runs to the liquid trap also has a tee which contains a bushing to connect to the exhaust hose from the vacuum pump.

- A. Using a hacksaw cut a 200mm (8") length of the 75mm (3") ABS pipe. Apply ABS solvent cement according to the directions and install the reducer on one end of this piece.
- B. Glue the 45 degree tee on the other end so that the tee branch is angled toward the end with the reducer.

- C. Using two hose clamps, secure this section to the rear riser in the RHS frame top. Do not tighten the hose clamps so that final alignment can be done later.
- D. Glue a 45 degree street elbow into the branch of the 45 degree tee so that it is oriented with the end horizontal.
- E. Cut a 38 mm (1-1/2") length of 38 mm (1-1/2") ABS pipe and glue it into the end of the 45 degree elbow from the previous step.
- F. Glue a 38mm (1-1/2") 90 degree elbow on the piece installed in the previous step so that it is oriented straight toward the front of the system.
- G. Cut a 254 mm (10") length of 38 mm (1-1/2") ABS pipe and glue it into the elbow installed in the last step.
- H. Temporarily mount the methoxide exhaust shroud on its stand and then adjust the height of the exhaust stack so that the exhaust pipe installed in the previous step lines up with the exhaust port in the side of the pail.
- I. Tighten the hose clamps on the exhaust stack to maintain this alignment. **Photo #13.**



Photo #13 Adjusting exhaust manifold height.

- J. Install but DO NOT GLUE a 38mm (1-1/2") 45 degree street elbow on the piece installed in the previous step so that it is oriented toward the end of the coaxial drier.
- K. Cut a 38 mm (1-1/2") length of 38 mm (1-1/2") ABS pipe and glue it into the elbow installed in the last step.
- L. Glue the 38 mm (1-1/2") tee onto the piece installed in the last step with the branch of the tee oriented downward.
- M. Glue the 38mm (1-1/2") X 13mm (1/2") FPT bushing into the 38mm (1-1/2") tee.
- N. Cut a 38 mm (1-1/2") length of 38 mm (1-1/2") ABS pipe and insert BUT DO NOT GLUE it into the remaining port of the tee.

- O. Fit but DO NOT YET GLUE a 45 degree elbow to the length of pipe just installed and orient it downward.
- P. Measure the vertical distance from the bottom of the rubber stopper on the end of the coaxial drier to the elbow installed in the previous step and cut a section of 38 mm (1-1/2") ABS pipe to that length and dry fit it to the elbow.
- Q. Check the orientation of these pieces to ensure that the lower exhaust duct ends beside the end of the coaxial drier and at the same height as the rubber stopper. Adjust the length if necessary.
- R. Glue the remaining connections in this orientation.
- S. Take the lid from the liquid trap containment vessel and hold it so that the rubber stopper on the coaxial drier lines up with the hole in the center of the lid. Mark the location where the exhaust stack meets the surface of the lid and cut a hole for it using a 50 mm (2") hole saw.

9. Electrical hookup.

The hot water tank has a 220 volt element but it will be powered with 110 volt AC so that it will only produce ¼ of the rated power. The system requires six switched electrical outlets for the following:

- 1. Exhaust fan.
- 2. Vacuum pump.
- 3. Heater.
- 4. Cooling pump (if used -recommended)
- 5. Mixing pump.
- 6. Methoxide mixer.

These can be made by combining switched outlets in dual duplex boxes. Ensure sufficient amperage and circuit protection on the circuit feeding the switch bank by adding up the current requirements for each of the components in the system. Assume a value of 3.5 amps for a 220 volt heater of 1500 watt capacity running on 110 volts. The boxes may be mounted wherever convenient such as welding to the frame or may be wall mounted beside the system as is the preference of the builder. They should be in reach of the system. The heater element must also be interlocked with a level switch so that it can never be energized without being immersed. Dry powering the heater will result in heater burnout and could result in an explosion if there were explosive vapours in the reactor at the time. Never defeat this interlock or omit it from a system when building one. The level interlock is not rated for the power of the heater so therefore a solid state relay is wired in series with the heater for this purpose. The relay is energized by the level switch. Mount the relay box on the side of the tank, behind the methoxide mixer. The electrical power inlet to this box comes from a switched outlet. If you are not qualified to do this wiring then have it done by someone who is. Always ensure there is no power connected when working with electrical wiring. See **photo #14** which shows details of the wiring connections. Use armor flex to route the wires between the relay box and the tank electrical connection.



Photo #14. Wiring details for the heater interlock.

11. Copyleft.



Attribution-NonCommercial-ShareAlike 2.5

CREATIVE COMMONS CORPORATION IS NOT A LAW FIRM AND DOES NOT PROVIDE LEGAL SERVICES. DISTRIBUTION OF THIS LICENSE DOES NOT CREATE AN ATTORNEY-CLIENT RELATIONSHIP. CREATIVE COMMONS

PROVIDES THIS INFORMATION ON AN "AS-IS" BASIS. CREATIVE COMMONS MAKES NO WARRANTIES REGARDING THE INFORMATION PROVIDED, AND DISCLAIMS LIABILITY FOR DAMAGES RESULTING FROM ITS USE.

License

THE WORK (AS DEFINED BELOW) IS PROVIDED UNDER THE TERMS OF THIS CREATIVE COMMONS PUBLIC LICENSE ("CCPL" OR "LICENSE"). THE WORK IS PROTECTED BY COPYRIGHT AND/OR OTHER APPLICABLE LAW. ANY USE OF THE WORK OTHER THAN AS AUTHORIZED UNDER THIS LICENSE OR COPYRIGHT LAW IS PROHIBITED.

BY EXERCISING ANY RIGHTS TO THE WORK PROVIDED HERE, YOU ACCEPT AND AGREE TO BE BOUND BY THE TERMS OF THIS LICENSE. THE LICENSOR GRANTS YOU THE RIGHTS CONTAINED HERE IN CONSIDERATION OF YOUR ACCEPTANCE OF SUCH TERMS AND CONDITIONS.

1. Definitions

- a. **"Collective Work"** means a work, such as a periodical issue, anthology or encyclopedia, in which the Work in its entirety in unmodified form, along with a number of other contributions, constituting separate and independent works in themselves, are assembled into a collective whole. A work that constitutes a Collective Work will not be considered a Derivative Work (as defined below) for the purposes of this License.
- b. **"Derivative Work"** means a work based upon the Work or upon the Work and other pre-existing works, such as a translation, musical arrangement, dramatization, fictionalization, motion picture version, sound recording, art reproduction, abridgment, condensation, or any other form in which the Work may be recast, transformed, or adapted, except that a work that constitutes a Collective Work will not be considered a Derivative Work for the purpose of this License. For the avoidance of doubt, where the Work is a musical composition or sound recording, the synchronization of the Work in timed-relation with a moving image ("synching") will be considered a Derivative Work for the purpose of this License.
- c. **"Licensor"** means the individual or entity that offers the Work under the terms of this License.
- d. **"Original Author"** means the individual or entity who created the Work.
- e. **"Work"** means the copyrightable work of authorship offered under the terms of this License.
- f. **"You"** means an individual or entity exercising rights under this License who has not previously violated the terms of this License with respect to the Work, or who has received express permission from the Licensor to exercise rights under this License despite a previous violation.

- g. **"License Elements"** means the following high-level license attributes as selected by Licensor and indicated in the title of this License: Attribution, Noncommercial, ShareAlike.

2. Fair Use Rights. Nothing in this license is intended to reduce, limit, or restrict any rights arising from fair use, first sale or other limitations on the exclusive rights of the copyright owner under copyright law or other applicable laws.

3. License Grant. Subject to the terms and conditions of this License, Licensor hereby grants You a worldwide, royalty-free, non-exclusive, perpetual (for the duration of the applicable copyright) license to exercise the rights in the Work as stated below:

- a. to reproduce the Work, to incorporate the Work into one or more Collective Works, and to reproduce the Work as incorporated in the Collective Works;
- b. to create and reproduce Derivative Works;
- c. to distribute copies or phonorecords of, display publicly, perform publicly, and perform publicly by means of a digital audio transmission the Work including as incorporated in Collective Works;
- d. to distribute copies or phonorecords of, display publicly, perform publicly, and perform publicly by means of a digital audio transmission Derivative Works;

The above rights may be exercised in all media and formats whether now known or hereafter devised. The above rights include the right to make such modifications as are technically necessary to exercise the rights in other media and formats. All rights not expressly granted by Licensor are hereby reserved, including but not limited to the rights set forth in Sections 4(e) and 4(f).

4. Restrictions. The license granted in Section 3 above is expressly made subject to and limited by the following restrictions:

- a. You may distribute, publicly display, publicly perform, or publicly digitally perform the Work only under the terms of this License, and You must include a copy of, or the Uniform Resource Identifier for, this License with every copy or phonorecord of the Work You distribute, publicly display, publicly perform, or publicly digitally perform. You may not offer or impose any terms on the Work that alter or restrict the terms of this License or the recipients' exercise of the rights granted hereunder. You may not sublicense the Work. You must keep intact all notices that refer to this License and to the disclaimer of warranties. You may not distribute, publicly display, publicly perform, or publicly digitally perform the Work with any technological measures that control access or use of the Work in a manner inconsistent with the terms of this License Agreement. The above applies to the Work as incorporated in a Collective Work, but this does not require the Collective Work apart from the Work itself to be made subject to the terms of this License. If You create a Collective Work, upon notice from any Licensor You must, to the extent practicable, remove from the Collective Work any credit as required by clause 4(d), as requested. If You create a Derivative Work, upon

- notice from any Licensor You must, to the extent practicable, remove from the Derivative Work any credit as required by clause 4(d), as requested.
- b. You may distribute, publicly display, publicly perform, or publicly digitally perform a Derivative Work only under the terms of this License, a later version of this License with the same License Elements as this License, or a Creative Commons iCommons license that contains the same License Elements as this License (e.g. Attribution-NonCommercial-ShareAlike 2.5 Japan). You must include a copy of, or the Uniform Resource Identifier for, this License or other license specified in the previous sentence with every copy or phonorecord of each Derivative Work You distribute, publicly display, publicly perform, or publicly digitally perform. You may not offer or impose any terms on the Derivative Works that alter or restrict the terms of this License or the recipients' exercise of the rights granted hereunder, and You must keep intact all notices that refer to this License and to the disclaimer of warranties. You may not distribute, publicly display, publicly perform, or publicly digitally perform the Derivative Work with any technological measures that control access or use of the Work in a manner inconsistent with the terms of this License Agreement. The above applies to the Derivative Work as incorporated in a Collective Work, but this does not require the Collective Work apart from the Derivative Work itself to be made subject to the terms of this License.
 - c. You may not exercise any of the rights granted to You in Section 3 above in any manner that is primarily intended for or directed toward commercial advantage or private monetary compensation. The exchange of the Work for other copyrighted works by means of digital file-sharing or otherwise shall not be considered to be intended for or directed toward commercial advantage or private monetary compensation, provided there is no payment of any monetary compensation in connection with the exchange of copyrighted works.
 - d. If you distribute, publicly display, publicly perform, or publicly digitally perform the Work or any Derivative Works or Collective Works, You must keep intact all copyright notices for the Work and provide, reasonable to the medium or means You are utilizing: (i) the name of the Original Author (or pseudonym, if applicable) if supplied, and/or (ii) if the Original Author and/or Licensor designate another party or parties (e.g. a sponsor institute, publishing entity, journal) for attribution in Licensor's copyright notice, terms of service or by other reasonable means, the name of such party or parties; the title of the Work if supplied; to the extent reasonably practicable, the Uniform Resource Identifier, if any, that Licensor specifies to be associated with the Work, unless such URI does not refer to the copyright notice or licensing information for the Work; and in the case of a Derivative Work, a credit identifying the use of the Work in the Derivative Work (e.g., "French translation of the Work by Original Author," or "Screenplay based on original Work by Original Author"). Such credit may be implemented in any reasonable manner; provided, however, that in the case of a Derivative Work or Collective Work, at a minimum such credit will appear where any other comparable authorship credit appears and in a manner at least as prominent as such other comparable authorship credit.
 - e. For the avoidance of doubt, where the Work is a musical composition:

- i. **Performance Royalties Under Blanket Licenses.** Licensor reserves the exclusive right to collect, whether individually or via a performance rights society (e.g. ASCAP, BMI, SESAC), royalties for the public performance or public digital performance (e.g. webcast) of the Work if that performance is primarily intended for or directed toward commercial advantage or private monetary compensation.
 - ii. **Mechanical Rights and Statutory Royalties.** Licensor reserves the exclusive right to collect, whether individually or via a music rights agency or designated agent (e.g. Harry Fox Agency), royalties for any phonorecord You create from the Work ("cover version") and distribute, subject to the compulsory license created by 17 USC Section 115 of the US Copyright Act (or the equivalent in other jurisdictions), if Your distribution of such cover version is primarily intended for or directed toward commercial advantage or private monetary compensation.
- f. **Webcasting Rights and Statutory Royalties.** For the avoidance of doubt, where the Work is a sound recording, Licensor reserves the exclusive right to collect, whether individually or via a performance-rights society (e.g. SoundExchange), royalties for the public digital performance (e.g. webcast) of the Work, subject to the compulsory license created by 17 USC Section 114 of the US Copyright Act (or the equivalent in other jurisdictions), if Your public digital performance is primarily intended for or directed toward commercial advantage or private monetary compensation.

5. Representations, Warranties and Disclaimer

UNLESS OTHERWISE MUTUALLY AGREED TO BY THE PARTIES IN WRITING, LICENSOR OFFERS THE WORK AS-IS AND MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND CONCERNING THE WORK, EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF TITLE, MERCHANTIBILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT, OR THE ABSENCE OF LATENT OR OTHER DEFECTS, ACCURACY, OR THE PRESENCE OF ABSENCE OF ERRORS, WHETHER OR NOT DISCOVERABLE. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO SUCH EXCLUSION MAY NOT APPLY TO YOU.

6. Limitation on Liability. EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW, IN NO EVENT WILL LICENSOR BE LIABLE TO YOU ON ANY LEGAL THEORY FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES ARISING OUT OF THIS LICENSE OR THE USE OF THE WORK, EVEN IF LICENSOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

7. Termination

- a. This License and the rights granted hereunder will terminate automatically upon any breach by You of the terms of this License. Individuals or entities who have received Derivative Works or Collective Works from You under this License, however, will not have their licenses terminated provided such individuals or entities remain in full compliance with those licenses. Sections 1, 2, 5, 6, 7, and 8 will survive any termination of this License.
- b. Subject to the above terms and conditions, the license granted here is perpetual (for the duration of the applicable copyright in the Work). Notwithstanding the above, Licensor reserves the right to release the Work under different license terms or to stop distributing the Work at any time; provided, however that any such election will not serve to withdraw this License (or any other license that has been, or is required to be, granted under the terms of this License), and this License will continue in full force and effect unless terminated as stated above.

8. Miscellaneous

- a. Each time You distribute or publicly digitally perform the Work or a Collective Work, the Licensor offers to the recipient a license to the Work on the same terms and conditions as the license granted to You under this License.
- b. Each time You distribute or publicly digitally perform a Derivative Work, Licensor offers to the recipient a license to the original Work on the same terms and conditions as the license granted to You under this License.
- c. If any provision of this License is invalid or unenforceable under applicable law, it shall not affect the validity or enforceability of the remainder of the terms of this License, and without further action by the parties to this agreement, such provision shall be reformed to the minimum extent necessary to make such provision valid and enforceable.
- d. No term or provision of this License shall be deemed waived and no breach consented to unless such waiver or consent shall be in writing and signed by the party to be charged with such waiver or consent.
- e. This License constitutes the entire agreement between the parties with respect to the Work licensed here. There are no understandings, agreements or representations with respect to the Work not specified here. Licensor shall not be bound by any additional provisions that may appear in any communication from You. This License may not be modified without the mutual written agreement of the Licensor and You.

Creative Commons is not a party to this License, and makes no warranty whatsoever in connection with the Work. Creative Commons will not be liable to You or any party on any legal theory for any damages whatsoever, including without limitation any general, special, incidental or consequential damages arising in connection to this license. Notwithstanding the foregoing two (2) sentences, if Creative Commons has expressly identified itself as the Licensor hereunder, it shall have all rights and obligations of Licensor.

Except for the limited purpose of indicating to the public that the Work is licensed under the CCPL, neither party will use the trademark "Creative Commons" or any related trademark or logo of Creative Commons without the prior written consent of Creative Commons. Any permitted use will be in compliance with Creative Commons' then-current trademark usage guidelines, as may be published on its website or otherwise made available upon request from time to time.

Creative Commons may be contacted at <http://creativecommons.org/>.

Part name	Description	Source	UPC code	Manufacturer	Part number	Data	Price	Qty	Ext. Price
Recirc. Pump	68 lpm 110v	Cole Parmer		March	A-07023-06	Catalog page	\$351.32	1	\$351.32
Exhaust fan	110v furnace type	Surplus	Surplus	Emerson	M-053		\$25.00	1	\$25.00
Water heater	36L 220V water heater	Home depot	020352508269	GE	GE10P06CAG		\$200.00	1	\$200.00
Heater interlock switch	Side mounted level switch	Omega			LVN-92	Catalog page	\$22.00	1	\$22.00
Heater interlock relay	Solid state zero crossing switch	Omega			SSRL240AC25	Catalog Page	\$30.00	1	\$30.00
Vacuum pump	Dual stage rotary vane 4 CFM	Cole Parmer			RK-07164-50	Catalog page	\$470.67	1	\$470.67
Vacuum Gauge	0-30" Hg	Cole Parmer		Ashcroft	A-68004-00	Catalog page	\$23.85	1	\$23.85
Temperature Gauge	Digital meat thermometer	Cole Parmer			A-90025-05	Catalog page	\$25.10	1	\$25.10
Aluminized bubble wrap	24" x 10 ft roll.	Home depot	716511320000				\$12.97	1	\$12.97
Frame LHS front	0.75" X 0.75" X 36"square tubular steel	Home depot	771878671677			Frame tube	\$6.95	5	\$34.75
Frame LHS rear	0.75" X 0.75" X 36"square tubular steel	Home depot	771878671677			Frame tube			\$0.00
Frame RHS front	0.75" X 0.75" X 48"square tubular steel	Home depot	771878671677			Frame tube			\$0.00
Frame RHS rear	0.75" X 0.75" X 48"square tubular steel	Home depot	771878671677			Frame tube			\$0.00
Frame joiner tubes	0.75" X 0.75" X 13"square tubular steel	Home depot	771878671677			Frame tube			\$0.00
1/4" tee nuts	1/4"-20	Home depot	000000129432				\$0.36	4	\$1.44
1/4" Carriage bolts	1/4"-20 x 2"	Home depot	000000137338				\$0.27	4	\$1.08
1/4" nuts	1/4"-20	Home depot	000000131119				\$0.10	4	\$0.40
Methoxide mixer left support piece	0.75" X 0.75" X 5"square tubular steel	Home depot	771878671677			Frame tube			\$0.00
Methoxide mixer front support piece	0.75" X 0.75" X 11.5"square tubular steel	Home depot	771878671677			Frame tube			\$0.00
Methoxide mixer right support piece	0.75" X 0.75" X 9"square tubular steel	Home depot	771878671677			Frame tube			\$0.00
Methoxide mixer rear support piece	0.75" X 0.75" X 10"square tubular steel	Home depot	771878671677			Frame tube			\$0.00
Vacuum valve	Brass needle valve	Cole Parmer			A-68831-00	Catalog page	\$16.32	1	\$16.32
Liquid trap bracket side piece	0.75" X 0.75" X 8"square tubular steel	Home depot	771878671677			Frame tube			\$0.00
Liquid trap bracket bottom piece	0.75" X 0.75" X 12"square tubular steel	Home depot	771878671677			Frame tube			\$0.00
Liquid trap bucket support piece	0.75" X 0.75" X 9"square tubular steel	Home depot	771878671677			Frame tube			\$0.00
Foot pedal	0.5" X 0.125" X 9" steel flat bar	Home depot	771878671035			3 ft length	\$4.46	0.33	\$1.47
Drawer slide	12" length.	Home depot	773199360018				\$3.76	1	\$3.76
Broom clips	clips to hold fill and wash hoses	Home depot	079325777287				\$2.29	2	\$4.58
Vacuum port horizontal piece	6"x 3/4" black pipe nipple	Home depot	032888992993				\$1.36	1	\$1.36
Vacuum Gauge port	3/4" tee black pipe	Home depot	032888406490				\$0.99	1	\$0.99
Gauge adapter	3/4" x 1/2" reducing bushing B.P.	Home depot	032888407053				\$1.08	1	\$1.08
Gauge adapter reducer	1/2" x 1/4" reducing bushing B.P.	Home depot	032888309647				\$0.82	1	\$0.82
Coaxial drier adapter	3/4" elbow black pipe	Home depot	032888406155				\$0.89	1	\$0.89
Coaxial vacuum port	1/2" sweat x 1/4" FPT	Home depot	685768203322				\$2.22	1	\$2.22
Coaxial vacuum port extension	1/2" x 4" copper water pipe	Home depot	400020054432				\$4.99	0.06	\$0.30
Coaxial drier fitting	1/2" MPT x 3/4" socket copper fitting	Home depot	685768203117				\$2.77	1	\$2.77
Coaxial drier ends	3/4" x 1/2" copper reducing end tee	Home depot	685768204107				\$2.78	3	\$8.34
Coaxial drier valves	1/2" boiler valve	Home depot	032888020030				\$3.98	2	\$7.96
Coaxial drier jacket	3/4" x 24" copper water pipe	Home depot	400020054449			6 ft length	\$8.99	0.33	\$2.97
Coaxial drier tube	1/2" x 32" copper water pipe	Home depot	400020054432			6 ft length	\$4.99	0.5	\$2.50
Rubber stopper	# 8 with 9/16" and 1/4" holes	Cole Parmer							
Drain pipe	6"x 3/4" black pipe nipple	Home depot	032888992993				\$1.36	1	\$1.36
Wash port	3/4" x 1/2" reducing tee	Home depot	032888406544				\$2.12	1	\$2.12
wash port adapter	45 degree 1/2" street elbow	Home depot	032888406407				\$1.38	1	\$1.38
Wash valve adapter	1/2" close nipple	Home depot	032888992573				\$0.64	1	\$0.64
Wash valve	1/2" ball valve	Home depot	032888070035				\$6.98	1	\$6.98
Wash tube fitting	1/2" MPT x 3/8" PP compression	Home depot	003288830965					2	\$0.00
Wash tube	3/8" FEP tube 12' length	J.J.Downs			FEP-250-2C				\$0.00

Drain valve	3/4" ball valve	Home depot	032888070042		\$9.98	1	\$9.98
Drain hose adapter	3/4" x garden hose adapter	Home depot	048643071889		\$3.59	1	\$3.59
Pump bracket	6" 90 degree angle bracket	Home depot	044315048005		\$3.94	1	\$3.94
Pump inlet adapter	3/4 x 2.5" modified black pipe nipple	Home depot	032888992924		\$0.81	1	\$0.81
Injector	1/2" MPT x 1/2" PE hose barb	Home depot	914940042395		\$1.99	1	\$1.99
Injector body	3/4" PP Tee	J.J.Downs	Banjo	TEE075			\$0.00
Pump adapter	3/4" PP street elbow	J.J.Downs	Banjo	SL075-90			\$0.00
Wash injection fitting	3/4" MPT x 3/8" PP compression	J.J.Downs	Parker	W6MC12		1	\$0.00
Pump bushing	3/8" MPT" x 1/4" FPT pp bushing	J.J.Downs	Banjo	RB038-025			\$0.00
Recirc line pump fitting	3/8" FPT x 1/2" 90 PP compression	J.J.Downs	Parker	W8FE6		1	\$0.00
Recirc line tank fitting	3/4" MPT x 1/2" PP compression	J.J.Downs	Parker	W8MC12		1	\$0.00
Recirc line	1/2" FEP tubing 24" length	J.J.Downs		FEP-375-2C		1	\$0.00
Methoxide valve	Stainless needle valve	Tubefit	Noshok	101 MFAS	\$51.00	1	\$51.00
Inlet hose adapter	3/4" x garden hose adapter	Home Depot	048643071889		\$3.59	1	\$3.59
Inlet valve	3/4" ball valve	Home Depot	032888070042		\$9.98	1	\$9.98
Inlet elbow	3/4" street elbow	Home Depot	032888406353		\$1.46	1	\$1.46
Inlet adapter	3/4" x 3" nipple	relocate				1	\$0.00
Interlock adapter	1/2" NPT black pipe union	Home Depot					\$0.00
5 gallon Pail with lid	Methoxide and liquid trap exhaust shroud	Surplus				2	\$0.00
Methoxide vessel	Stainless steel 8 quart stock pot	Canadian Tire	42-3625-6		\$19.99	1	\$19.99
Filling funnel	Funnel with screw cap	Canadian Tire	28-3336-0		\$7.97	1	\$7.97
Methoxide fitting	1/4" stainless compression fitting	Tubefit	SS-400-1-4				\$0.00
Methoxide delivery line	1/4" x 0.04" wall PE tube x 5 foot length	J.J.Downs	Parker	E-43-005		1	\$0.00
Mixer motor	Electric drafting eraser.	Surplus	Kohinoor		\$9.99	1	\$9.99
Mixer shaft	1/4" x 24" 316 stainless rod	Metal supermarket		SS ROUND 304	\$4.56	1	\$4.56
Mixer prop	Aquacraft 25mm plastic boat prop	RC hobbyshop			\$2.50	1	\$2.50
Prop screw	6-32 stainless panhead machine screw			424-058	\$0.07	1	\$0.07
1/4" wheel collet	Collet with setscrew	Spaenaur		600-100	\$1.89	1	\$1.89
Mixer motor mount	ABS trap adapter	Home depot	039923195180		\$1.39		\$0.00
Exhaust duct large	3" ABS drain pipe	Home depot	622454091146		\$16.89	1	\$16.89
Exhaust duct small	1-1/2" ABS drain pipe	Home depot	622454091178		\$4.19	1	\$4.19
Exhaust fan coupling	3" rubber with clamps	Home depot	018578000773		\$5.88	2	\$11.76
Exhaust branch	3" x 3" x 1-1/2" 45 deg ABS tee	Home depot	039923280435		\$3.98	1	\$3.98
Exhaust reducer	3" x 1-1/2" ABS reducer	Home depot	039923201348		\$2.98	1	\$2.98
Vacuum pump bushing	1-1/2" x 1/2" FPT reducing bush	Home depot	062852601644		\$1.96	1	\$1.96
Electrical box	Relay box	Home depot	626463080876		\$3.10	3	\$9.30
Cover plate	Switch and outlet cover	Home depot	622538422729		\$2.77	3	\$8.31
Switched outlet	Power switch with 3 prong outlet	Home depot	068679161217		\$8.48	6	\$50.88
							\$1,512.94